

K-LEVEL

LEVEL UP YOUR PRECISION

MEASURING TECHNOLOGY. SIMPLE. INTELLIGENT.

Professional Sales Program 2025



RC100



- | With power switch
- | Two-way communication, remote control
- | Independent function buttons, easy to operate
- | Usage distance $\geq 150\text{m}$
- | Real-time function indicator, quickly understand the Main Machine working status
- | No. 5 alkaline battery
- | Laser rotation speed 300/600/1000rpm



RC200



- | Two-way communication, long-distance control
- | Independent function buttons, easy to operate
- | Usage distance $\geq 300\text{m}$
- | Real-time function indicator light, quickly understand the working status of the Main machine
- | With a power button, understand the working status of the Main machine at any time
- | Built-in lithium battery pack, super long working time
- | Rubber-coated design, better resistance to falling
- | Laser rotation speed 300/600/1000/1500rpm



RC300



- | LCD Screen, more convenient slope setting
- | Two-way communication, long-distance control
- | Independent function buttons, easy to operate
- | Usage distance $\geq 300\text{m}$
- | Real-time function indicator light, quickly understand the working status of the Main machine
- | With a power button, understand the working status of the Main machine at any time
- | Built-in lithium battery pack, super long working time
- | Rubber-coated design, better resistance to falling
- | Laser rotation speed 300/600/1000/1500/3000rpm



X-axis horizontal angle indication

Y-axis horizontal angle indication

Speed indicator

Directional scanning function reduction (cycle key)

X&Y-axis direction slope adjustment function key

Vibration measurement mode function key

Manual/Automatic mode switch key

Clockwise rotation function key

Counter clockwise rotation function key

Manual automatic indication

Scanning angle indication


Speed switching function key(cycle key)

Vibration alarm mode function key

On/Off key



Enter the slope setting display interface

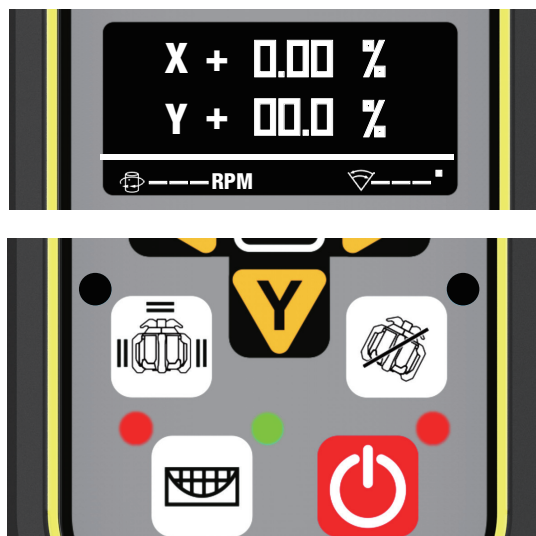

Slope Setting Steps Overview






1 Enter manual mode




2 Press and hold the set key (3 seconds) to enter the following interface



3 Press  to move the cursor
Press  to change the value

4 Confirm and input value and press the  to automatically start the slope movement

If there is an input error, reset it with 





K-LEVEL

LEVEL UP YOUR PRECISION

📞 MOUNTLASER

💬 181 1233 4566

📱 +86-181 1233 4566

✉ M@K-LEVEL.COM

🌐 WWW.K-LEVEL.COM

MOUNT LASER (CHANGZHOU) INSTRUMENT CO.,LTD